

# VARI-AIR SYSTEM COMPONENTS

Blower


Air Lock

Control Panel

External View



Internal View

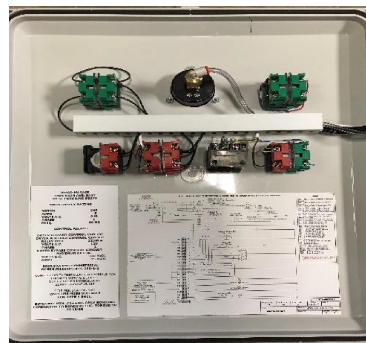

Assembled View



# CONTROL PANEL INSTALLATION LOCATIONS

- We are a UL508A panel shop, all systems meet NEC and local requirements.
- When installing insider or outside please be aware of the intake air quality. When installing next to a grain dryer, the amount of debris in the air would limit filtration lifetime. When indoor try to install an intake air window or louver. Try to have enough room around the air system for system serviceability in the future. There will be a significant amount of vibration from the blower, a sufficient base is required.
- It is recommended to anchor the blower to prevent movement. If you have questions on blower installation, please call.
- Our systems are designed to be installed either inside (Nema Type 1) or outside (Nema Type 3R).

